

## WARRANTY

Shiloh Precision Tooling, Inc. warrants to the original owner that this product is free from defects in parts and workmanship for one (1) year from date of purchase. Shiloh Precision Tooling, Inc. will repair the product or, at its option, replace a defective **Coil Server** or any component thereof free of charge. This warranty is in lieu of all other warranties and conditions, express or implied.

EXCLUSIONS: This warranty does not cover any of the following:


1. Damage to or failure of the **Coil Server** or any component thereof due to alteration, misuse, lack of maintenance or exceeding the maximum weight load applicable to the size of the **Coil Server**.

Shiloh Precision Tooling, Inc. disclaims any responsibility for incidental or consequential damages. Under no circumstances is Shiloh Precision Tooling, Inc., its officers, employees, agents or affiliates, liable for any loss, damage, or expenses of any kind arising out of the use or inability to use this product.

HOW AND WHERE TO MAKE A WARRANTY CLAIM: Contact Shiloh Precision Tooling, Inc. at P.O. Box 1015, Penfield, N.Y. 14526-1015, (585) 377-6816.

Where the law of any jurisdiction prohibits any term of this warranty, such term shall be null and void, but the remainder of this warranty shall remain in full force and effect.

# The Coil Server

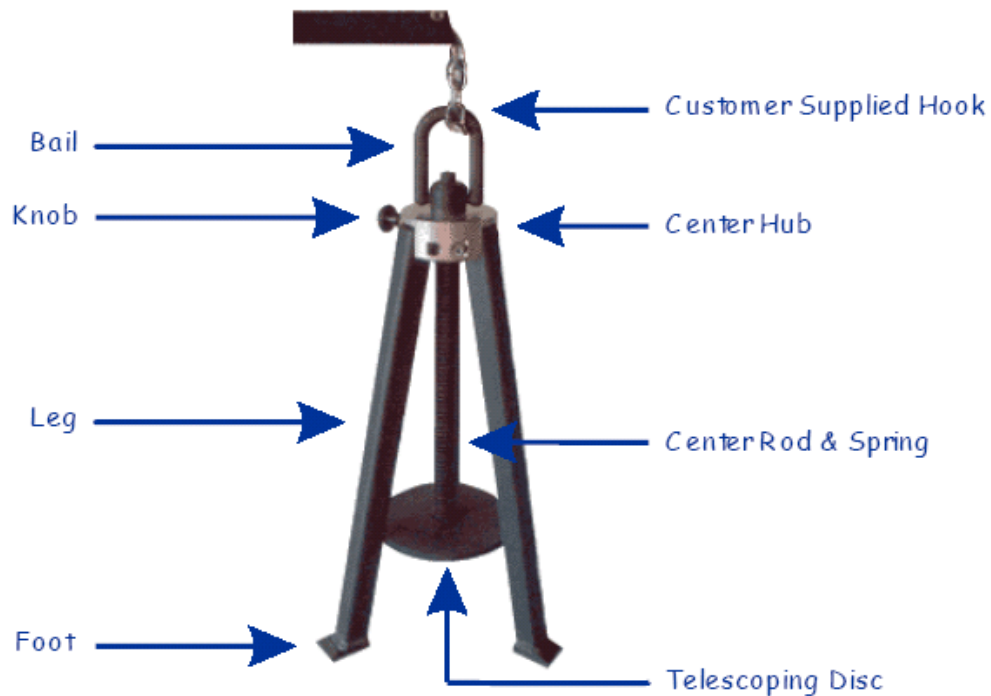

## Assembly Instructions

1. Bolt Disc to bottom of center rod as per illustration.
2. Torque to 36-40 FootPounds.

## Operating Instructions

1. Release Knob and contract legs by lifting on center hub or lowering the Coil Server to the floor.
2. Tighten Knob.
3. Raise Coil Server.
4. Move to position over center of coil to be moved.
5. Lower to a height that the feet will be able to expand under the coil you are attempting to lift.
6. Release Knob - The legs should expand and the feet should be under the coil.
7. Lift Coil Server.
8. Coil should have risen.